


更改輸入模式

※因應現場更換不同感測器,可由內部短路端子更改所需的輸入模式(如下圖)

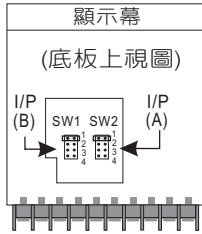

SW1/SW2	JUMPER	DEFINITION
	1	Open: 12V; Close: 5V
	2	Open: 100KHz; Close: 100Hz
	3	Open: NPN; Close: PNP
	4	Open: PNP; Close: NPN






※Connection:

NPN (5V): 0~100 Hz

NPN (5V): 0~100 KHz

NPN (12V): 0~100 Hz

NPN (12V): 0~100 KHz

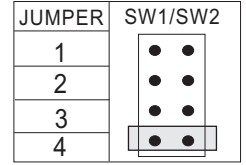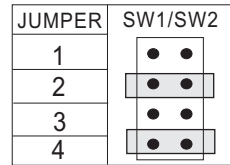
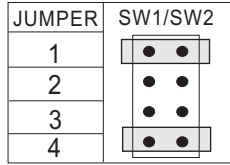
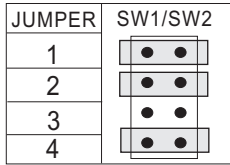
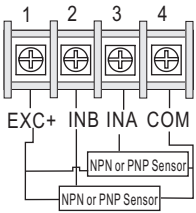


PNP (5V): 0~100 Hz

PNP (5V): 0~100 KHz

PNP (12V): 0~100 Hz

PNP (12V): 0~100 KHz

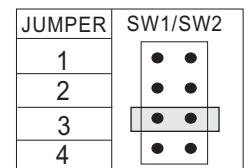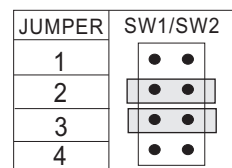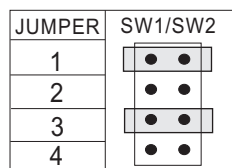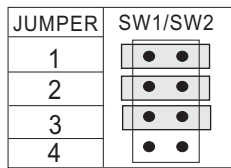

※Connection:

Relay Contact: NPN 0~100 Hz

※開關接點輸入請選擇 NPN 0~100 Hz.

