LIVA XE-B1.3 LIVA INDUSTRIAL DATA COLLECTION RECORDER MANUAL

Home page



1. Use the combination key to call the administrator login screen: CTRL+ALT+SHIFT+D 2. "If you do not appear on the home page, please enter the Startup folder on the desktop in order" click 01, 02, 03 to run the program.

- When starting up, the program will automatically run and open the home page. If there
 is no home page, "please enter the "dcbox" folder on the desktop → the "startup" folder
 → Click "auto_start. bat" to execute.
- Other: To perform the shutdown action, as the program will automatically display full screen, you can first ALT+F4 to close the home page." Turn off the full screen before shutting down or click the WINDOWS button to open the "Start Column" to execute the shutdown.

Administrator Login



1. Login password: admin (default)

Administrator Mode - Historical Data



- 1. Select "Point (Parameter) Name", time range, and time interval in order Click "Data Query" after the above selection. If the data is too large, please wait patiently for processing time.
- 2. "After querying the data, you can select and click on "Chart Data", "Report Data", View and download image files from the "Source".

Administrator Mode - System Settings

 ↔ ♂ (○) 12780.154 K2004 HR ⇒ 4.558 ⇒ 4.658 ⇒ 4.652 	82/#SystemSetup 低力を処認定数 配位取得時間(行): 2 正設証券時間(行): 60 受変密幅 設定度改数碼:	2 x 0 \$
Канн алла ала ала ала ала ал ал	留存未成改定物 配位取得時間(行): 2 資料僅存時間(行): 60 健変繁盛 設定便改物碼::	
E 4.08	配位取得時間(行): 2 資料保存時間(行): 60 現史回答 設定/現次前碼::	
0 825 9 16420 0 25221 2 25221	(1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	
• MRDD	雙变附著 設定/更改編碼:	
0 H2RN	設定/更改密碼:	
▶ 系统股空		
	然香稿:	
	160W :	
	新闻研(研究):	
		Copyright © BEAR Website 2021

- 1. Point sampling time: grab data from products with RS485 every () seconds.
- 2. Data storage time: store data in the "designated location" in Excel every () seconds.
- 3. As stated above, there are two designated locations:
- A. Automatically create this year's folder in computer C drive and store it.
- B. Insert the portable disk named " 『IOT』 " into the USB port, and the program will automatically judge and store it.

Administrator Mode - Boot

Layout	x +	v	-	σ	×
← → C (0 127.0.0.1:54982/#PowerOff				0.9	9 I
松前科技	新培养模式 显出				_
	Copyright C BEAR Website 2021				

"If the above settings are done, click" "Log out in administrator mode" to return to the home page.

RS485 communication format setting

- 1. Baud Rate : 9600
- 2. Parity : None 3. Data bit : 8 4. Stop bit : 1